


RONDA 5030 D

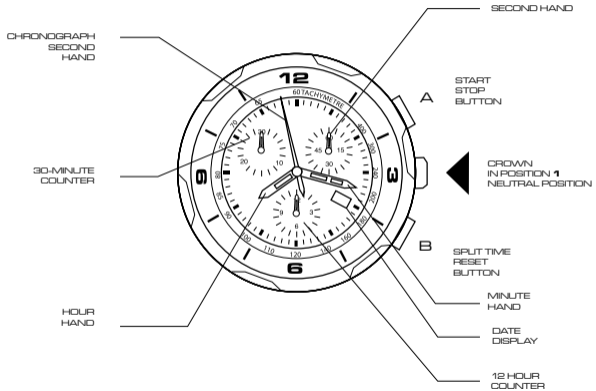


WARNING:

- UNSCREW THE CROWN AND BUTTONS WHEN THE MODEL IN QUESTION FEATURES SCREW CROWN AND BUTTONS
- REMEMBER TO TIGHTEN THE CROWN AND BUTTONS AFTER USE
- NEVER PERFORM THE ABOVE WHEN THE WATCH IS WET OR IN WATER IN ORDER TO GUARANTEE WATERPROOFNESS

CROWN IN POSITION 2


. DATE ADJUSTMENT

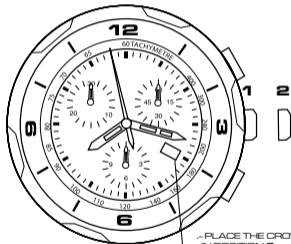

- PLACE THE CROWN IN POSITION **2**
- TURN THE CROWN CLOCKWISE TO ADJUST THE DATE
- THE DATE IS ADJUSTED EVERY TIME THE HAND PASSES THROUGH MIDNIGHT


CROWN IN POSITION 3

. TIME ADJUSTMENT

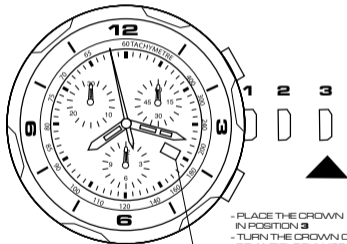

- PLACE THE CROWN IN POSITION **3**
- TURN THE CROWN CLOCKWISE OR ANTICLOCKWISE TO ADJUST THE TIME
- THE DATE IS ADJUSTED EVERY TIME THE HAND PASSES THROUGH MIDNIGHT

PRECISION TIMING MODE SIMPLE CHRONOGRAPH FUNCTION

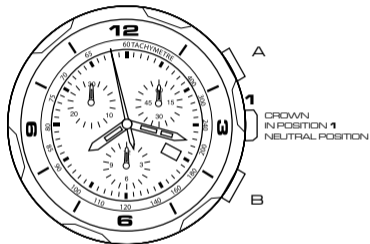


PLEASE NOTE:

THE HANDS MUST BE RESET EVERY TIME BEFORE USING THE PRECISION TIMING MODE. IF NECESSARY RESET HANDS USING BUTTON **B**.


READING OF TIMING

PRESS BUTTONS IN THIS ORDER:

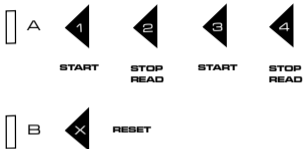


READING OF SPLIT TIMES

PRESS BUTTONS IN THIS ORDER:

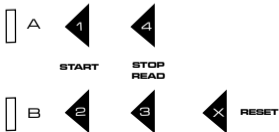

RESETTING OF CHRONOGRAPH HANDS

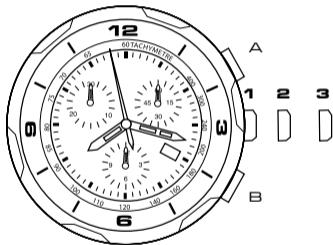

TO RESET CHRONOGRAPH HANDS

- PLACE THE CROWN IN POSITION **3**
(unscrew the crown in case of screw crown)
- PRESS DOWN BUTTONS **A** AND **B**
AT THE SAME TIME FOR 2 SECONDS
(the central second hand turns 360° and adjustment mode is on)

ADJUSTMENT OF CENTRAL SECOND HAND

- PRESS BUTTON **A** ONCE
(quick movement)
- KEEP BUTTON **A** PRESSED DOWN
(continuous movement)

TO ADJUST SUBSEQUENT CHRONOGRAPH HAND, PRESS BUTTON **B**

ADJUST OF CHRONOGRAPH MINUTE AND HOUR HANDS

- **MECHANICAL COUPLING -**
- PRESS DOWN BUTTON **A** ONCE
(quick movement)
- KEEP BUTTON **A** PRESSED DOWN
(continuous movement)

3. PLACE THE CROWN IN POSITION **1**
(tighten the crown in case of screw crown)